

Contents

THINGS TO KNOW BEFORE YOU SEW	6
The Info System	8
The Main Menu Info System.....	8
Threading the Top Thread	8
Threading the Needle	9
Bobbin Winding	9
Bobbin Winding Through the Needle	10
Inserting the Bobbin.....	10
The More Options Window Info System	11
The Sewing Menu Info System.....	11
The Context Menu	12
Audio Signals	13
Select Language.....	13
Options for Messages	14
Raise Presser Foot.....	15
Revert to Original Settings	16
Welcome Screen	17
Calibration.....	18
Contrast	18
Delete All.....	19
Machine Test	20
Version	20

Pattern Parameters	21
Delete all Stitch Sequences	22
Selection View.....	23
Sewing Functions	24
Stitch Selection	24
Main Menu.....	24
Number Selection	25
All Stitches	25
Direct Selection	25
The Sewing Menu	26
Reading the Screen	26
Status Bar	27
Action Field	27
Function Field.....	27
Changing the Stitch Parameters.....	28
Needle Positions.....	28
Width	28
Stitch Length.....	29
Pattern Length.....	30
Balance	31
Density.....	32
More Options	33
Tie Off	33
Single Stitch.....	34

Twin Needle Sewing	35
Patchwork Program (Programmable seam length).....	36
Tapering Symmetrical decrease tapers to a point.....	37
Tapering Symmetrical increase tapers from a point	38
Tapering Asymmetrical decrease to a right angle.....	39
Tapering Asymmetrical increase from a right angle	39
Darning/Free Motion Sewing	40
Exiting a Sewing Menu	41
Buttonholes (using preset sizes).....	42
Buttonholes (programming the size while sewing)	43
Buttonholes (manually overriding the end bartack)	44
Sequences.....	45
Creating and Saving Sequences	45
Exercise 1	45
Exercise 2.....	47
Editing a Sequence.....	48
Creating and Editing an Alphabet Sequence	50
Opening a Saved Sequence.....	50
Combining Decorative Stitches with Alphabets.....	52
Deleting a Sequence.....	53
Index	55




will display the next 5 memories.


5. Press the Main Menu button  to close the dialog box.

 
Sewing Functions

Stitch Selection

Main Menu

1. On the Main Menu screen, touch the Utility stitches icon . (If the Welcome screen is active, you will




need to press the Main Menu button  to access the Main Menu screen).


2. Press the Right Arrow button  to move from screen to screen to view the stitches in this category.
3. Touch the icon for the stitch of your choice. The stitch Menu for your selected stitch will be displayed on the screen.




Stitch categories that display an arrow to the side have subcategories. They will be displayed when you touch the icon.


 
 

Number Selection

1. Press the Number Selection button . The selection by number screen is displayed.
2. Enter the desired stitch number. The stitch number is displayed in the upper left of the box.
3. Touch OK  to select or esc  to cancel.



Touch the delete icon  to erase an incorrect entry. If a stitch number is entered that does not exist, a dialog box opens with the message "invalid pattern number". Touch the message box to close. Erase the incorrect stitch number and enter the desired stitch number.

All Stitches

1. From the Main Menu , touch the All Stitches icon .
2. Press the arrow buttons  to scroll through the stitches. You can access every machine stitch by scrolling from screen to screen using the arrow buttons  or touching & dragging your stylus along the scroll bar.

Direct Selection

1. From the Main menu , touch Utility stitches .